


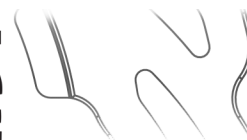

Strange



EVOLUTION 4-PISTON FRONT BRAKE KIT INSTRUCTIONS

KIT

B4114WCE - '70 -'78 Camaro
Disc Spindles

APPLICATIONS

1973-1977 Century, 1975-1977 Skylark
1970-1978 Camaro, 1973-1977 Monte Carlo
1973-1977 Chevelle / Malibu / El Camino
1977-1978 Impala with 11" rotors
1975-1978 Nova, 1973-1977 Cutlass
1970-1978 Firebird, 1973-1977 Grand Prix
1973-1977 Lemans, 1977-1978 Phoenix
1973-1977 Tempest, 1975-1977 Ventura

Evolution Rotors

- Dynamic Drive Mount (DDM) system secures the rotor and allows for rotor thermal expansion
- DDM system design is secured by an internal Spirolox, eliminating heavy bolts and hardware
- Unique Aero Slot design reduces rotating weight and promotes even heat dissipation

Before you begin installation:

-Strange Engineering brake kits are designed for DRAG RACING ONLY!

-Read these instructions thoroughly and save for future reference.

-Brake fittings do not come pre-installed, it will need a layer of Teflon sealer applied to the thread (Figure# 2 for torque specs)


-If after reading these installation instructions, you have any questions or comments, please do not hesitate to call us.

KIT CONTENTS

ITEM#	PART#	QTY	DESCRIPTION
1	A1028A	10	1/2"-20 x 2.5" Wheel stud
2	A1028B	10	1/2" I.D. Wheel stud washer
3	B4114B	2	7/16"-14 x 2.00" FHSCS Caliper bracket bolt
4	B1301E	4	3/8"-24 Press nut (Installed in B4114A)
5	B1320H	2	Inner hub bearing cup (Timken LM67010 installed in B1324A)
6	B1320J	2	Inner hub bearing cone (Timken LM67048)
7	B1324A	2	Front hub "F" 4.75" B.C.
8	B1324D	2	Outer hub bearing cup (Timken LM11910 installed in B1324A)
9	B1381D	2	3/8"-16 x 1.00" Caliper bracket bolt
10	B1729A	2	Hub seal (C.R. 19748)
11	B1324E	2	Outer hub bearing cone (Timken LM11949)
12	B1301H	16	3/8" I.D. x 0.025" Thick caliper shim
13	B1301J	4	3/8" I.D. x 1/16" Thick caliper washer
14	B5000Z	4	3/8"-24 x 1.187" Caliper bolt
15	B5010	4	DRM-35 metallic 4-piston brake pad
16	B1900	2	Billet Caliper
17	P2316	2	1/8" NPT x -3AN Fitting
18	B2798AS	2	Evolution S Rotor
19	B2794B	2	2-Piece rotor adapter
20	B2794D	2	Spirolock
21a	B4114AR	1	R.H. Caliper mount bracket
21b	B4114AL	1	L.H. Caliper mount bracket
22	B4154E	2	Aluminum hub cap
23	S3520F	2	#222 Buna O-ring (Installed on B4154E)
24	S3402N	2	3/8" AN Washer
25	B1381B	2	7/16" I.D. x 7/8" Long stand

Installation instructions

Figure # 1

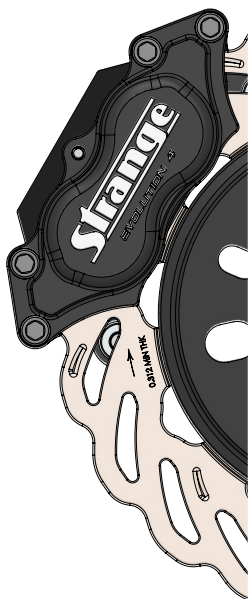

1. Raise and support front of vehicle on a level surface using suitable equipment.
2. Remove wheel, stock disc, hub, brake line, and backing plate/caliper assembly from spindle.
3. Clean and inspect spindle for damage (spun wheel bearings, stripped threads, etc.) and repair or replace as needed. Inspect upper and lower ball joints for excessive play and replace as needed.
4. Spindle dust shield holes need to be drilled and tapped larger for caliper mounting bolts as shown in Figure #2. Top hole should be drilled to 3/8" then tapped to 7/16"-14. Bottom hole drilled to 5/16" then tapped to 3/8"-16. Both same depth as original holes.
5. Mount caliper bracket (21) with the press nuts (4) facing outboard side of vehicle using one 3/8"-16 x 1.00" caliper bracket bolt (9) in the bottom bolt location. At the top location, use a 3/8" I.D. x 7/8" long stand (25) between the upright and the bracket to even out the mounting surface; use the 3/8"-16 x 2.00" FHSCS caliper bracket bolt (3). Use one 3/8" caliper bracket washer (24) between the 3/8"-26 x 1.00" bolt head (9) and the bracket. Torque to 35 ft. lbs.
6. Install 1/2" Dia. wheel studs (1) in front hub (7) using 1/2" I.D. wheel stud washer (2) and a small amount of BLUE Loc-tite®. Torque all studs to 65 ft-lbs. Note: Consult your wheel and/or lug nut manufacturer for proper lug nut torque.
7. Pack the inboard (6) and outboard bearing cone (11) with a suitable wheel bearing grease. Note: A bearing packer is recommended for this procedure. If one is not available work as much grease as possible into the cage and around the rollers.
8. Wipe a thin layer of wheel bearing grease on the bearing surface of the inner and outer cups (5, 8) and slide the inboard bearing cone (6) into hub (7).
9. Press the hub seal (10) into the inboard side of the hub (7) flush to the outside.
10. Slide the hub assembly onto the spindle then slide the outer bearing cone (11) into the hub (7).
11. Install the stock spindle washer and nut.
12. Mount the wheel and tire assembly on the hub and snug the lug nuts.
13. While rotating the wheel, torque the spindle nut to approximately 20 ft-lbs.
14. Loosen the spindle nut until the wheel spins freely and there is no end play.
15. Install the cotter pin, aluminum hub cap (22), and remove the wheel and tire.
16. Slide the rotor (18, 19, 20) over the wheel studs flush to the face of the hub (7).


Note: Slotted rotors mount with the arrow pointing in the direction of normal rotation (See Figure #1).

- Please read B1850 instructions for complete caliper instructions.

17. Attach caliper (16, 17) with the arrow facing in the direction of normal rotor rotation using 3/8"-24 caliper bolts (14) with red loctite and 3/8" I.D. flat washers (13). Use 3/8" I.D. caliper shims (12) to center the caliper over the rotor, making sure pads contact the rotor evenly. Use any remaining shims under the head of the 3/8" Dia. Caliper bolt to prevent the bolt from contacting the rotor. Torque the caliper mounting bolts (14) to 35 ft-lbs.
18. Connect the hydraulic lines to the calipers. Calipers are tapped to 1/8"-27 NPT and supplied with -3AN fittings. Use proper adapters to connect them to existing lines or use new -3AN braided steel line (teflon lined). Bleed the calipers with DOT 4 or DOT 5.1 brake fluid ONLY.
19. A proper break in procedure is required to avoid brake fade and uneven rotor deposits from the pads. It consists of 8-10 brake applications increasing in harshness while allowing the brakes to cool slightly in between; do not keep the brakes applied between stops. After the last stop the brakes should be allowed to cool completely.

Notes: A proper break in procedure is required to avoid brake fade and uneven rotor deposits from the pads. It consists of 8-10 brake applications increasing in harshness while allowing the brakes to cool slightly in between; do not keep the brakes applied between stops. After the last stop the brakes should be allowed to cool completely. Operate the vehicle in a cautious manner until you determine that the brakes are functioning properly. Routinely check and re-torque all bolts.

FIGURE # 2: Exploded B4114WCE Assembly View (Passenger side shown)

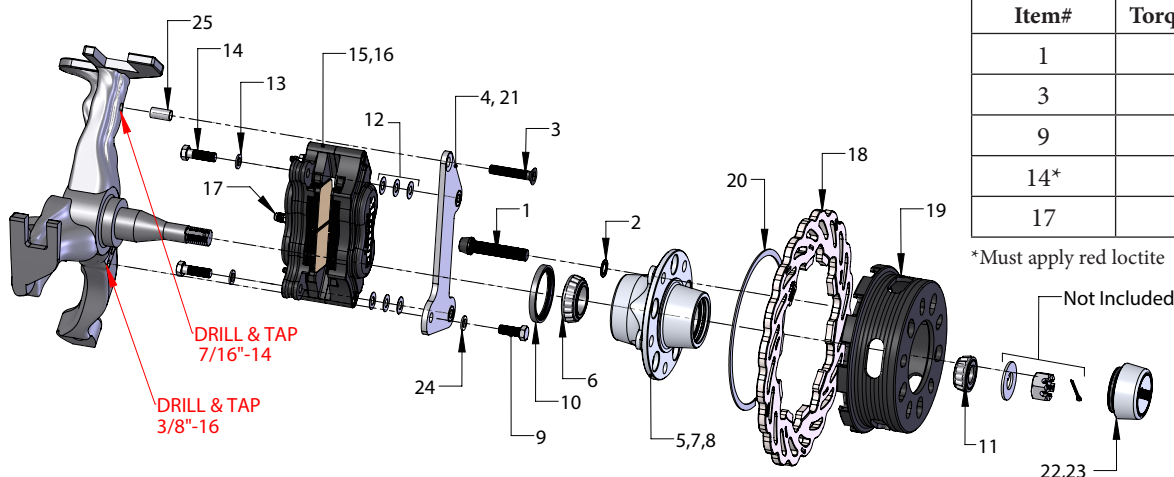

Item#	Torque spec (ft-lbs)
1	65
3	40
9	35
14*	35
17	25

*Must apply red loctite

Not Included