

Page 1 of 2 Oct 20, 2020

PRO SERIES 4-PISTON FRONT BRAKE KIT INSTRUCTIONS **KIT #** B4144WC - 4.75" B.C wheels

B4145WC - 4.50" B.C wheels

APPLICATIONS

- 1987-1993 Mustang with 8 cylinder spindles
- 1987-1988 Thunderbird with 4 cylinder spindles

Before you begin installation:


- -Strange Engineering brake kits are designed for DRAG RACING ONLY!
- -Read these instructions thoroughly and save for future reference.
- -If after reading these installation instructions, you have any questions or comments, please do not hesitate to call us.

| KIT CONTENTS | | | |
|--------------|----------|-----|--|
| ITEM# | PART# | QTY | DESCRIPTION |
| 1 | A1028A | 10 | 1/2"-20 x 2.5" Wheel stud |
| 2 | A1028B | 10 | 1/2" I.D. Wheel stud washer |
| 3 | B1301E | 4 | 3/8"-24 Press nut (Installed in B4144AR/L) |
| 4 | B1330A | 2 | Inner hub bearing cup (Timken L68110 installed in B1332A/B4154SPM) |
| 5 | B1330B | 2 | Inner hub bearing cone (Timken L68149) |
| 6 | B1332A | 2 | Front hub "SF" 4.75" B.C. (For B4144WC) |
| - | B4154SPM | 2 | Front hub "HS" - 4.50" B.C. (For B4145WC) |
| 7 | B1330C | 2 | Outer hub bearing cup (Timken LM12710 installed in B1332A/B4154SPM |
| 8 | B1330D | 2 | Outer hub bearing cone (Timken LM12749) |
| 9 | B1381D | 4 | 3/8"-16 x 1" caliper bracket bolt |
| 10 | B2795 | 1 | Right hand HD/MD tapered rotor |
| 11 | B2796 | 1 | Left hand HD/MD tapered rotor |
| 12 | B1301H | 16 | 3/8" I.D. x 0.025" Thick caliper shim |
| 13 | B1301J | 4 | 3/8" I.D. x 1/16" Thick flat washer |
| 14 | B5000Y | 4 | 3/8"-24 x 1.125" Caliper bolt |
| 15 | B5010 | 4 | Soft Metallic 4-piston caliper pad |
| 16 | B5002 | 1 | Right hand 4-piston caliper |
| 17 | B5004 | 1 | Left hand 4-piston caliper |
| 18 | P2316 | 2 | 1/8" NPT x -3AN Fitting (Installed in B5002 & B5004) |
| 19 | B4154E | 2 | Aluminum hub cap |
| 20 | B4144AR | 1 | Right Caliper mounting bracket |
| 21 | B4144AL | 1 | Left Caliper mounting bracket |
| 22 | S3402N | 4 | 3/8" AN Washer |
| 23 | S3520F | 2 | #222 Buna O-ring (Installed on B4154E) |
| 24 | B1328B | 2 | Hub seal (National 6815) |

Page 2 of 2 Oct 20, 2020

Installation instructions

Figure # 1

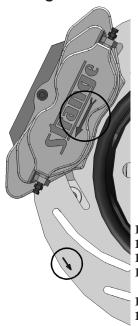

- 1. Raise and support front of vehicle on a level surface using suitable equipment.
- 2. Remove wheel, caliper, rotor, hub, and brake line. Inspect all ball joints for excessive play and replace as needed.
- 3. Cut off upper and lower caliper mounting ears at a distance approximately 1" from the center of the original caliper mounting hole on the top and approximately 2.5" from the original caliper mounting hole on the bottom as shown in figure #2
- 4. Drill holes to 5/16" and tap the caliper mounting bracket holes on the spindle to 3/8"-16 (see Figure #2/3).
- 5. Install the caliper mounting bracket (20) using the 3/8" caliper bracket bolts (9) and 3/8"AN washers (21) making sure that the press nuts (3) are facing towards the rotor (10, 11). Torque to 45 ft.-lbs.
- **6.** Install 1/2" Dia. wheel studs (1) in front hub (6) using 1/2" I.D. wheel stud washer (2) and a small amount of BLUE Loc-tite*. Torque all studs to 65 ft-lbs. Note: Consult your wheel and/or lug nut manufacturer for proper lug nut torque.
- 7. Pack inner (5) and outer bearing cones (8) with a suitable wheel bearing grease. Note: A bearing packer is recommended for this procedure; If one is not available work as much grease as possible into the cage and around the rollers.
- **8.** Wipe a thin layer of wheel bearing grease on the bearing surface of the inner and outer cups (4, 7) and place inner bearing cone (5) into the front hub (6).
- 9. Press the hub seal (23) into the inboard side of the hub (6) flush to the outer face of the hub.
- 10. Slide the hub assembly onto the spindle then slide the outer bearing cone (8) into the hub (6).
- 11. Install the key washer and the spindle nut.
- 12. Mount the wheel and tire assembly on the hub and snug the lug nuts.
- 13. While rotating the wheel, torque the spindle nut to approximately 20 ft-lbs. Then, loosen the spindle nut until the wheel spins freely and there is no end play.
- 14. Install the stamped spindle nut retainer, cotter pin, aluminum hub cap (19), and remove the wheel and tire.
- **15.** Slide the rotor (10, 11) over the wheel studs flush to the face of the hub (6). Note: Slotted rotors mount with the arrow pointing in the direction of normal rotation (See Figure #3).
- Please read B1850 instructions for complete caliper instructions.
- 16. Attach caliper (16, 17) with the arrow facing in the direction of normal rotor rotation using 3/8"-24 caliper bolts (14) with <u>red</u> <u>loctite</u> and 3/8" I.D. washers (13). Use 3/8" I.D. caliper shims (12) to center the caliper over the rotor, making sure pads contact the rotor evenly. The caliper bolt (14) should be fully engaged into the press nut. If the bolt is over engaged, use any remaining shims under the head of the bolt to prevent it from running into the rotor. Torque the caliper mounting bolts (14) to 35 ft-lbs. Note: Because all spindles vary slightly you may not need the same amount of shim on both sides of the vehicle.
- 17. Connect the brake lines to the calipers. Calipers are tapped to 1/8"-27 NPT and supplied with -3AN fittings. Use proper adapters to connect them to existing lines or use new -3AN braided steel line (teflon lined). Bleed the calipers with DOT 4 or DOT 5.1 brake fluid ONLY.
- **18.** A proper break in procedure is required to avoid brake fade and uneven rotor deposits from the pads. It consists of 8-10 brake applications increasing in harshness while allowing the brakes to cool slightly in between; do not keep the brakes applied between stops. After the last stop the brakes should be allowed to cool completely.

